


Installation of RSF Adjustable length

1. To install the adjustable length, first measure and calculate the total length required.
2. Pull apart the RSF adjustable : into the 2 parts
3. Measure the insulation to the required length to fill each piece
 - a. add extra 30mm to allow for compression when fitted
4. Cut the insulation and insert into RSF adjustable ends
5. Push the insulation firmly into the void making sure no part is left un-insulated
6. Re-join the 2 pieces of Adjustable

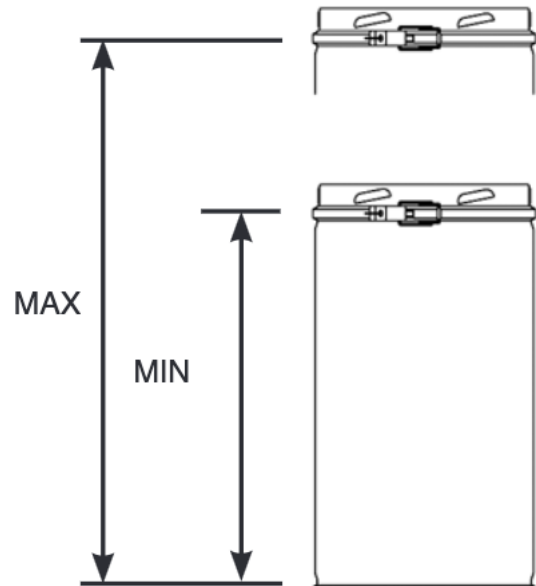

We recommend to secure the 2 piece RSF insulated adjustable length: and support using RSF Ceiling Support