



FLUE AND BLANKING PLATE SEALING ON ISLAND, COVE, C-SERIES, COUNTRY & BEMBRIDGE STOVES



The top flue connection is now sealed using rope seal in place of fire cement. The stove is dispatched with the flue blanking plate fitted to the top outlet and the seal fitted. A length of adhesive backed glass fibre webbing is provided for sealing the rear connection. When handling glass fibre, use gloves and a suitable face mask.

If a rear flue connection is used then apply the adhesive backed glass fibre webbing to the sealing face of the flue collar and attach to the rear flue connection.

If a top flue connection is used then remove the blanking plate and the clamping plate. Leave the sealing rope in position and fit the flue collar. Apply the adhesive backed glass fibre webbing to the blanking plate and clamp it in position over the rear flue connection ensuring the clamping plate fits over the two lugs on the stove body.

The flue connection into the flue collar may be sealed using the glass fibre webbing. Ensure all flue connections are well sealed.

If a rear flue connection is used then apply the adhesive backed glass fibre webbing to the sealing face of the flue collar and attach to the rear flue connection.

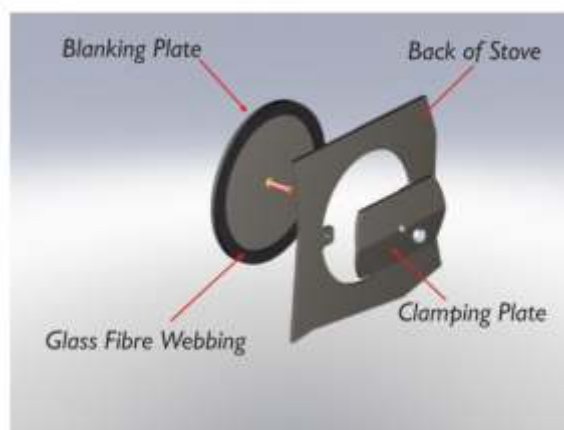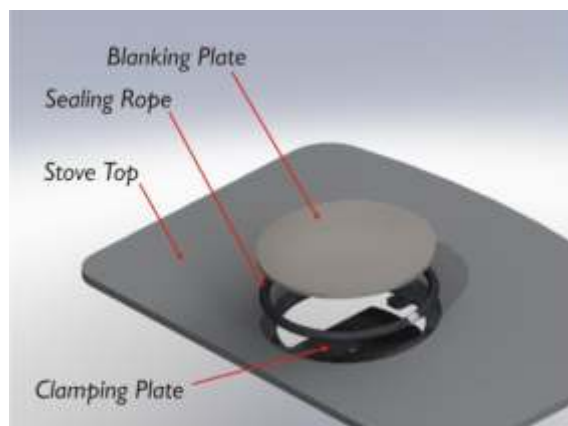

**FLUE AND BLANKING PLATE SEALING ON
ARC 7 & SKYE STOVES**

The stove is dispatched with the flue blanking plate fitted to the top outlet. A length of self adhesive webbing is also provided for sealing the rear connection. When handling glass fibre, use gloves and a suitable face mask.

If a rear flue connection is used then apply the adhesive backed glass fibre webbing to the sealing face of the flue collar and attach to the rear flue connection.


If a vertical rear flue adaptor is used the flue collar supplied with the Arc 7 and Skye is to be fitted to the lugs on the vertical rear flue adaptor.

If a top flue connection is used then remove the blanking plate and the blanking plate retainer. The flue pipe surround ring should rest inside the inverted flue of the top casting. The flue pipe can then be connected directly.


Apply the adhesive backed glass fibre webbing to the blanking plate and clamp it in position over the rear flue connection ensuring the clamping plate fits over the two lugs on the stove body.

Ensure all flue connections are well sealed.


Blanking plate fitted to top outlet

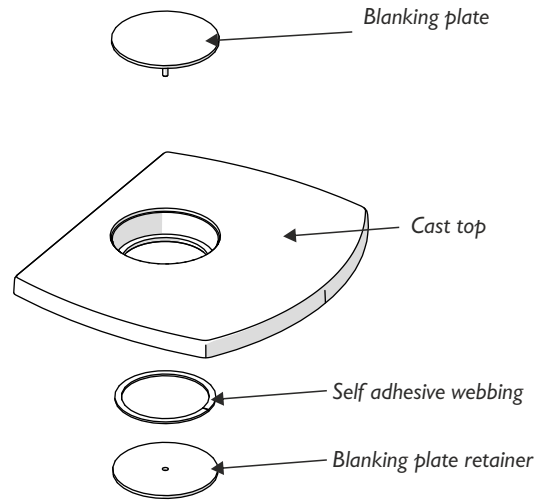

Top flue connection

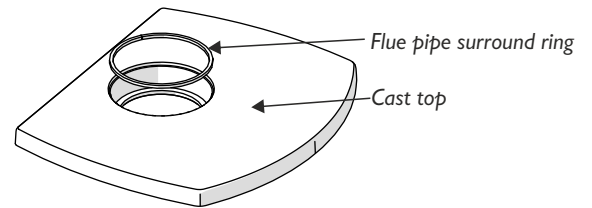

Vertical rear flue adaptor

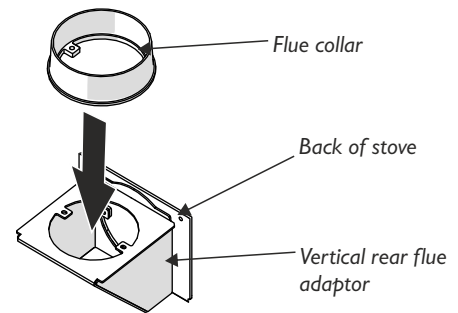

Blanking plate fitted to rear outlet

