



**BAL FLASH**<sup>®</sup>  
by AZTEC



## BAL40 FLASH INSTALLATION GUIDE



**1** Cut the roofing sheet for the pipe size (size chart provided). Put the pipe in the hole



**2** Put the ProFlash over the pipe and peel off the perforated backing from left to right



**3** Place the BAL mesh over the ProFlash sheet



**4** Put the ProFlash tape along the pipe ensuring there are no gaps between the ProFlash and the pipe



**5** If required, cut the flashing to the pipe size




**6** Slide the flashing over the pipe



**7** Apply the sealant and form the flashing to the roof profile



**8** Start with screwing one vertical edge and then move across with the screws being between the valleys

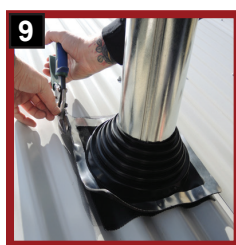

**9** If required, trim the excess BAL mesh



Installation complete



est. 1876

**PIVOT**  
stove & heating

**pivotstove.com.au**

wholesale@pivotstove.com.au

1300 474 868

North Geelong VIC 3215